

Get Started

Portable Wireless Microphone SYNCO G2 (A1)



Complete the following steps in order:

Step 1

- Find the audio jacks on your computer and identify if they are type A or type B.
- Select the correct audio lead for the type.
- Plug this into your computer.



Step 2

- Plug the other end of the audio lead into the receiver.
 - Power on the unit (long press)
- Use the USB to charge the unit.



Please note: USB is power only. This mic is not a USB device and does not provide audio data to the computer.

Step 3

- Power on the transmitter unit (long press)
 - The units connect automatically using Bluetooth
- Use the USB to charge the unit.




Please note: USB is power only. This mic is not a USB device and does not provide audio data to the computer.



Get Started

Portable Wireless Microphone SYNCO G2 (A1)

Check the microphone is selected:

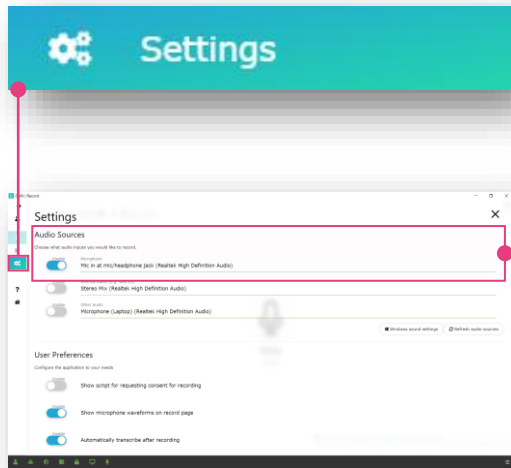


Audio Sources

Choose what audio inputs you would like to record.



Microphone

Mic in at mic/headphone jack (Realtek High Definition Audio)

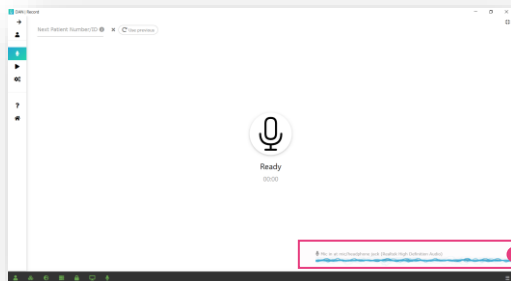

Mic in at mic/headphone jack (Realtek High Definition Audio)



Please note:

The name of the microphone may differ to that shown here.

Choosing a microphone | wireless

Surgery size

Small
<6m²

Medium
<12m²

Large
<12m²

Best

Example: *RØDE Wireless GO*

£ 200

🔌 📶 🔋 7h



Good

Example: *SYNCO G2*

£ 100

🔌 📶 🔋 6h



Basic

+ *USB Bluetooth Adapter*

£ 5-10

🔌 📶 🔋 2h



Audio quality
Transcription quality